


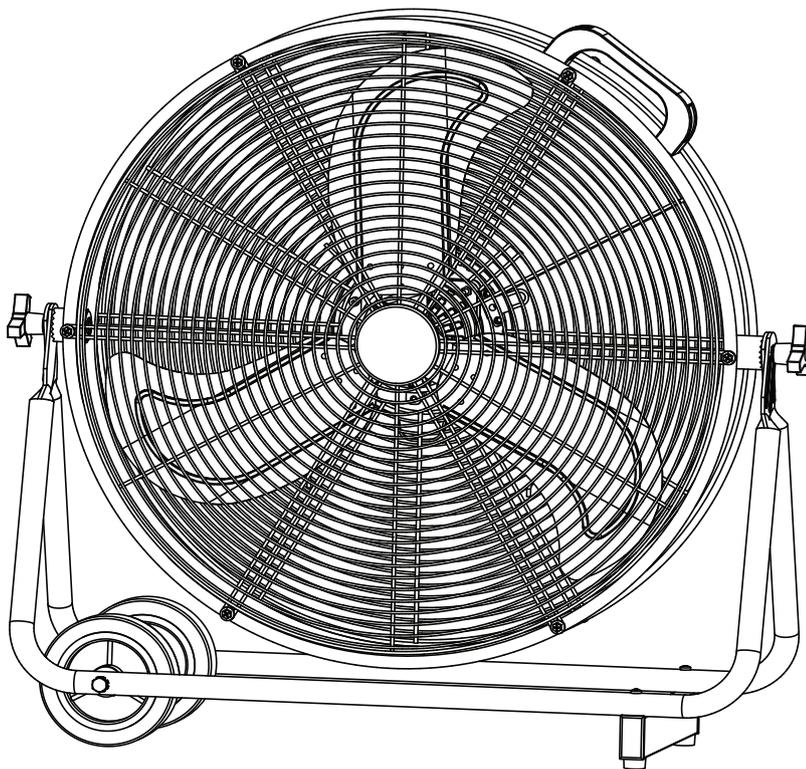

OWNER'S MANUAL

24 IN. DRUM FAN

SKU: 92024



OWNER'S MANUAL AND SAFETY INSTRUCTIONS

SAVE THIS MANUAL: KEEP THIS MANUAL FOR SAFETY WARNINGS, PRECAUTIONS, ASSEMBLY, OPERATING, INSPECTION, MAINTENANCE AND CLEANING PROCEDURES. WRITE THE PRODUCT'S SERIAL NUMBER ON THE BACK OF THE MANUAL NEAR THE ASSEMBLY DIAGRAM (OR MONTH AND YEAR OF PURCHASE IF PRODUCT HAS NO NUMBER)

FOR QUESTIONS PLEASE CALL OUR CUSTOMER SUPPORT: 909.628.0880 MON-FRI 9AM TO 3PM PST

SAFETY INFORMATION


WARNING

1. Read and save these instructions. Do not operate fan unless you have read these instructions.
2. Unplug the fan before moving it or performing maintenance. Do not touch the fan when your hands are wet.
3. Those who are not qualified electricians should not disassemble, repair or rebuild the fan.
4. Unplug the fan when it is not in use.
5. DO NOT unplug the fan by pulling the cable cord. Unplug by holding the plug and pulling.
6. DO NOT use the fan when there is damage to the cable cord or plug. If the supply cord is damaged, it has to be replaced by the manufacturer, its service agent or similarly qualified persons.
7. DO NOT use the fan with an extension cord.
8. DO NOT use the fan close to fires or flammable material.
9. DO NOT insert your hand or other objects into the grill or the movable parts.
10. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
11. DO NOT use this fan outdoors, this fan is designed for indoor use only.
12. To reduce the risk of fire, electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).


CAUTION

1. Unplug the fan from the socket and clean it with a soft cloth.
2. DO NOT immerse the fan in liquid.
3. Fit the guard onto the fan before starting up the fan.
4. This fan is not intended for use by people (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the fan by a person responsible for their safety. Supervise children to ensure they do not play with the fan.


ASSEMBLY INSTRUCTION

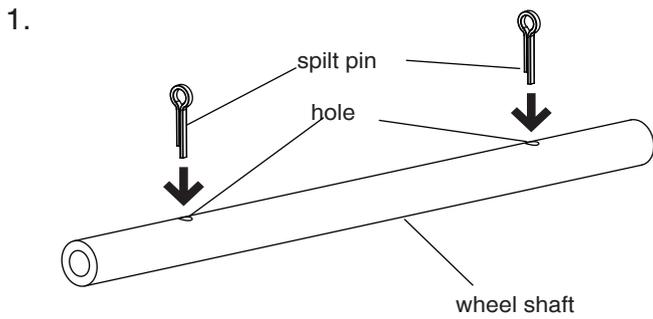


Take the split pin through the hold of wheel shaft.

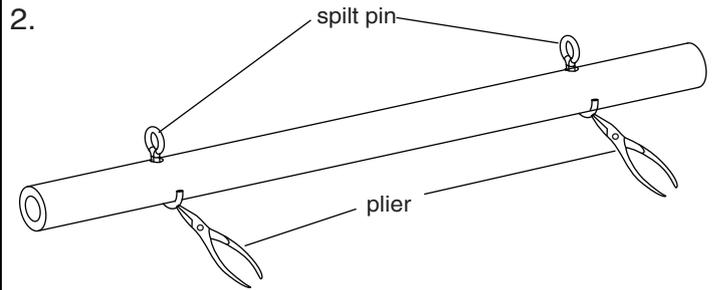


Open the split pin by plier.

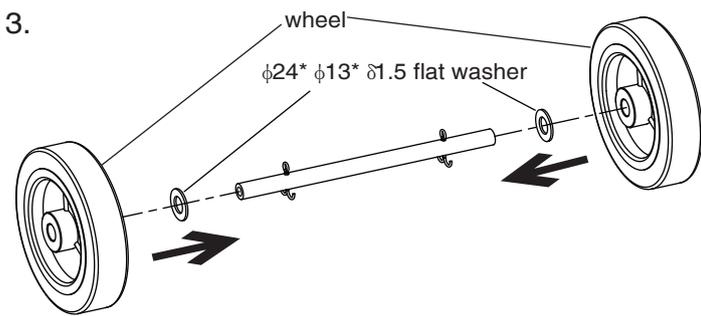


Insert the flat washer and wheel to the wheel shaft

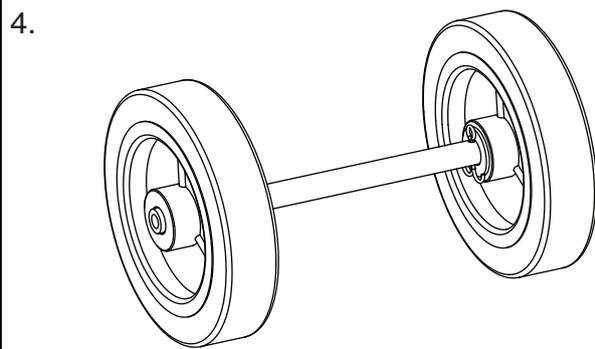


Wheel assembly

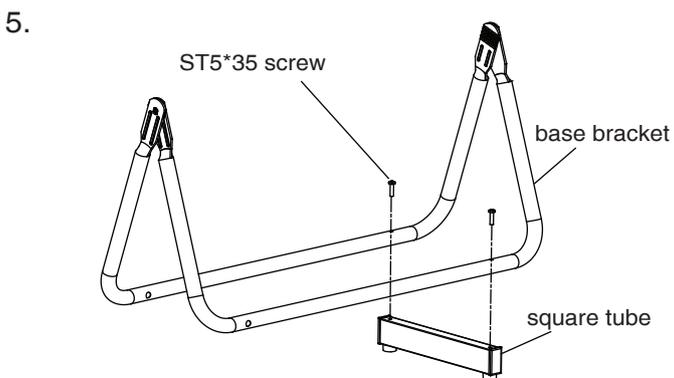


Install the square tube with base bracket by screws ST5*35.

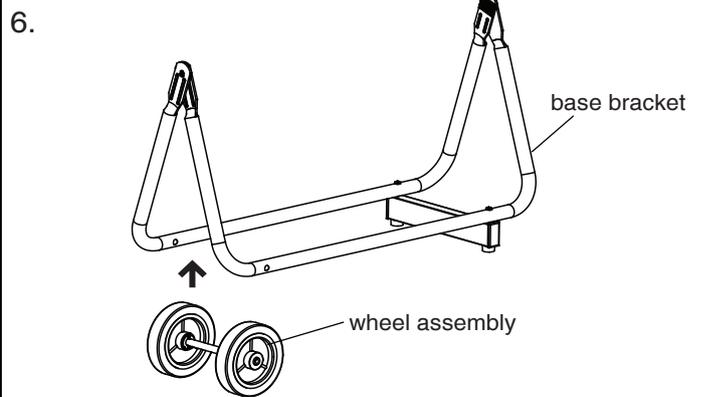

Install the wheel assembly into the base bracket

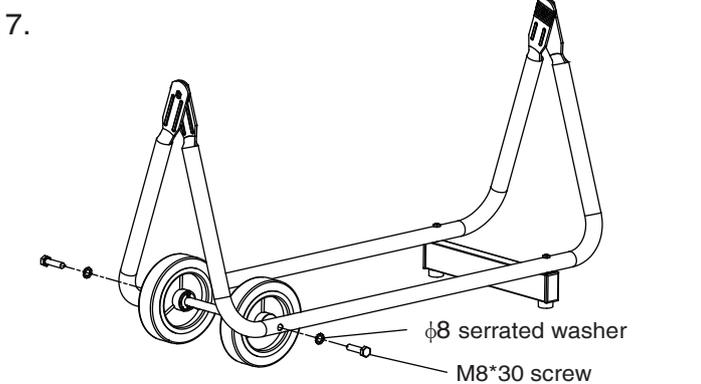


Fastening the wheel assembly into the base bracket by M8*30 screws and $\phi 8$ serrated washers.

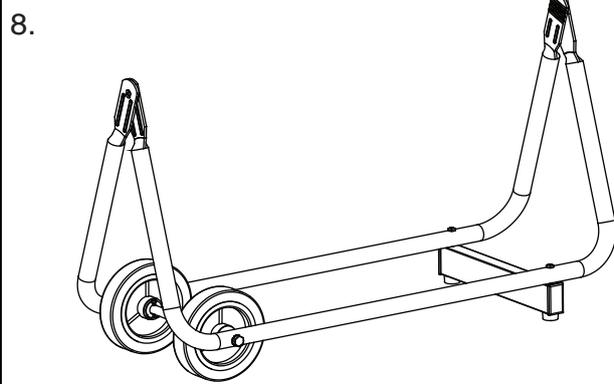


wheel and base bracket assembly

9.

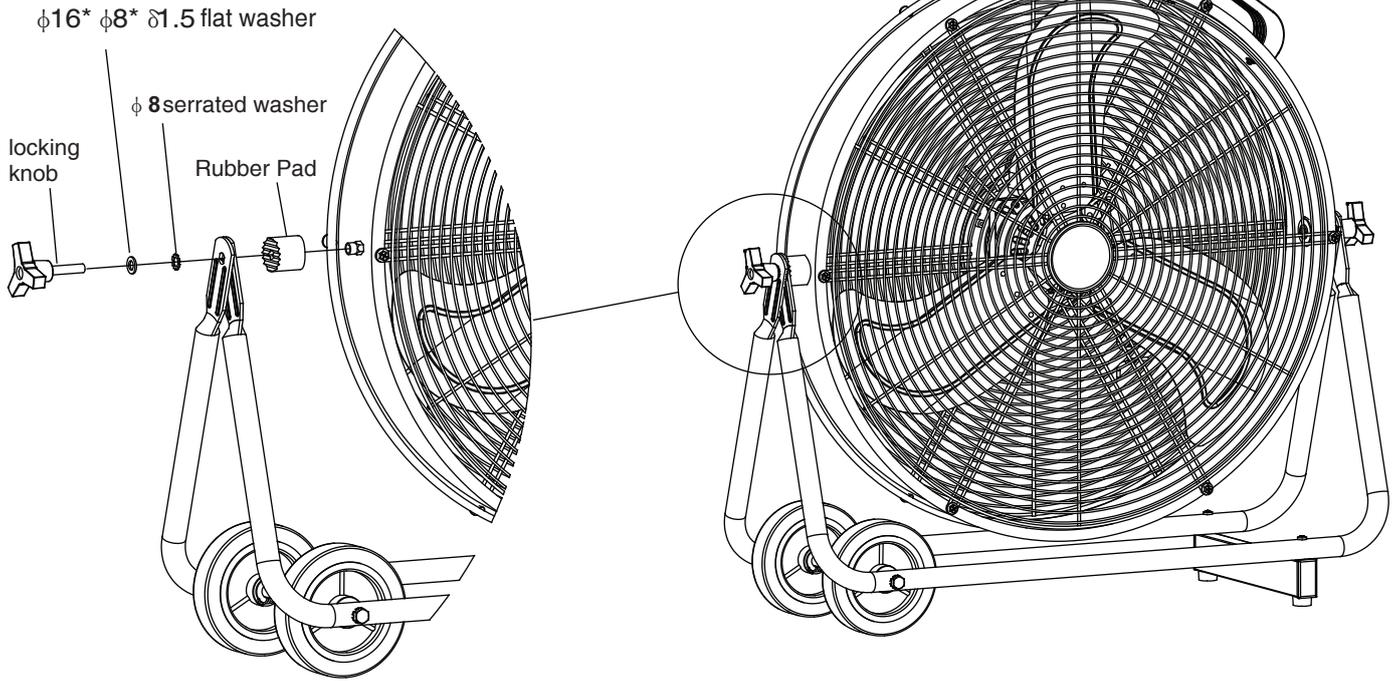

Assemble the base bracket with two side of drum body by fastening the locking knobs, flat washers, serrated washers and rubber pads.

10.

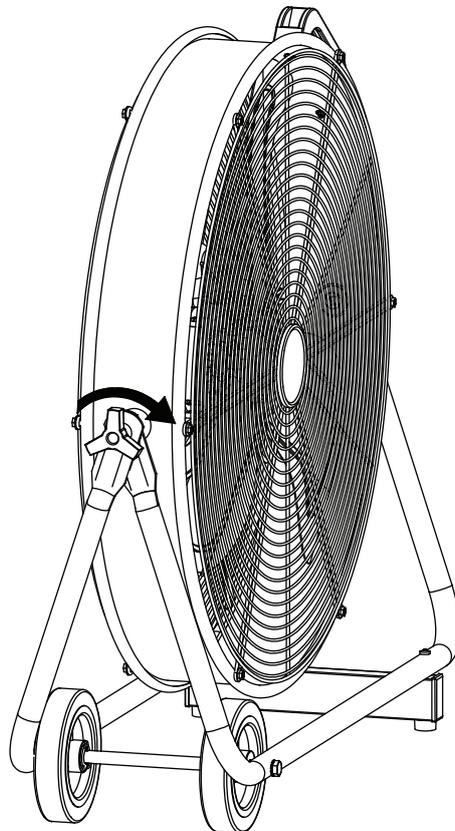


Adjust the locking knobs to secure the drum in desired position, and tight it by turning the locking knobs clockwise.

OPERATION INSTRUCTION

1. Place the fan on a safe, flat surface where it can not fall or be pulled by the cord.
2. Adjust the desired speed by rotating the switch knob at the back of fan.

0 Stop 3 High 2 Medium 1 Low

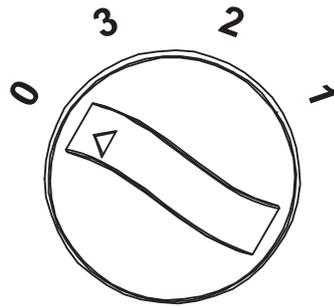


3. Tilt the fan head up or down for desired direction of air flow.

CARE AND CLEANING

Unplug the appliance before cleaning. Don't use any water for cleaning metal surfaces. Slightly moisten a cloth and then wipe off the surfaces of the fan. In order to remove dust from the grill, use a vacuum cleaner or remove the front grill by removing the securing screws on the edge of the grill. After cleaning, remount the grill. After doing this, fasten the screws on the edge of the grill.

PART LIST

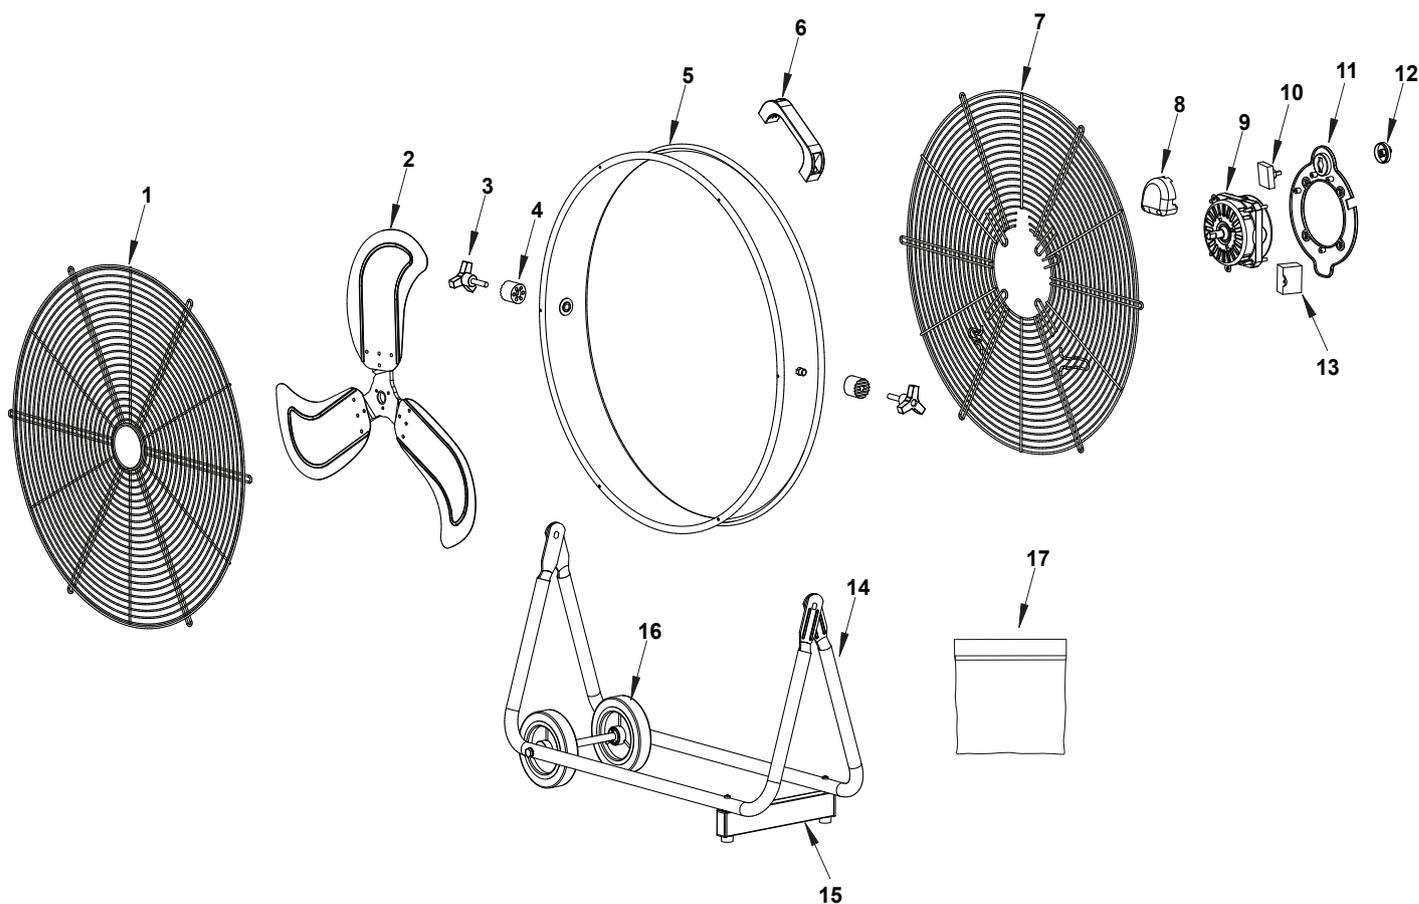

PART	DESCRIPTION	PART#
1	Front Grill	92024-01
2	Blade	92024-02
3	Locking Knob	92024-03
4	Rubber Pad	92024-04
5	Drum	92024-05
6	Handle	92024-06
7	Rear Grill	92024-07
8	Switch Box	92024-08
9	Motor	92024-09
10	Switch	92024-10
11	Switch Flange	92024-11
12	Switch Knob	92024-12
13	Capacitor	92024-13
14	Base Bracket	92024-14
15	Square Tube	92024-15
16	Wheel Assembly	92024-16
17	Screw Pack	92024-17

Screw Pack List

Description	Quantity
Flat washer ϕ 16* ϕ 8* δ 1.5	2
Serrated Washer ϕ 8	4
Locking Knob	2
Screw ST5* 35	2
Screw M8* 30	2
Flat Washer ϕ 24* ϕ 13* δ 1.5	2
Split Pin	2

OF NOTE

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND OF THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Record Product's Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only and are not available individually as replacement parts.



SAVE THESE INSTRUCTIONS.

Questions, Problems or Missing Parts?

Before returning to a retailer, our exceptional customer service is available to help.



Call Us: 909.628.0880

Hours of Operation: 9 to 3pm PST, Monday-Friday

Email: customer@xtremepowerusa.com

PRODUCT MADE IN CHINA